



Installing and Turning On All Black Ink

Unpackage your inks. Follow any instructions on cartridges for removal of tabs (if applicable).

Click In:

Each cartridge is labeled with its proper slot position. Insert the cartridges in your model into their proper slots using the same procedure you would with Epson cartridges (follow your cartridge installation directions in your Epson User Guide). You can NOT use cartridges designed for a particular slot in any other slot and this can damage the chip and/or hardware plus the hardware will not function. Inserting in order from left to right is not required but suggested whenever possible.

Desktop Users:

Make sure all cartridges comfortably fit (click in). Clicking indicates they have made the proper contact.

Wide Format Users:

Note that an on-screen (Epson hardware display) message of "Non-Genuine" is a good message and simply a disclaimer by Epson indicating they are NOT Epson carts. Answer the disclaimer by clicking the DOWN Arrow and reading through the information. Click the left Arrow when prompted to accept (YES). This message will appear EACH time you power up your Epson.




<http://www.softwareforscreenprintertech.com/epsonditto>
Select video 2-Epson Wide Format Setup

In the rare instance a cartridge doesn't set immediately, review the "Tips for All Black Ink" PDF available for download on our website: www.softwareforscreenprinters.com on the All Black Ink page. A sanctioned Chip Resetter is designed to reset chips that don't set. They are available on our web site or through your All Black Ink Reseller. Note: not all resetters are created equal. Insist on a Freehand Graphics resetter. Resetters are not designed to fool the printer into thinking they have ink when they are drained.



<http://www.softwareforscreenprintertech.com/epsonditto>
Select video 3 or 4-Chip Resetter

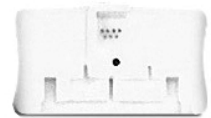


Click On:

TURN ON the All Black feature from within AccuRIP. AccuRIP prints from the Photo Black by default.

Open/Launch AccuRIP Software. From the FILE Menu > Setup go to the first Tab called "What printer do you have?" and in the Ink Setup area click the "Multi-black" box. This Clicks ON the All Black Ink ability and all cartridges in your model are listed and shown as ON. Each slot checked will spray during the print process.

The AccuRIP Ink Setup shown is of an Epson 1400 All Black Ink system with 6 cartridges (slots) turned ON.

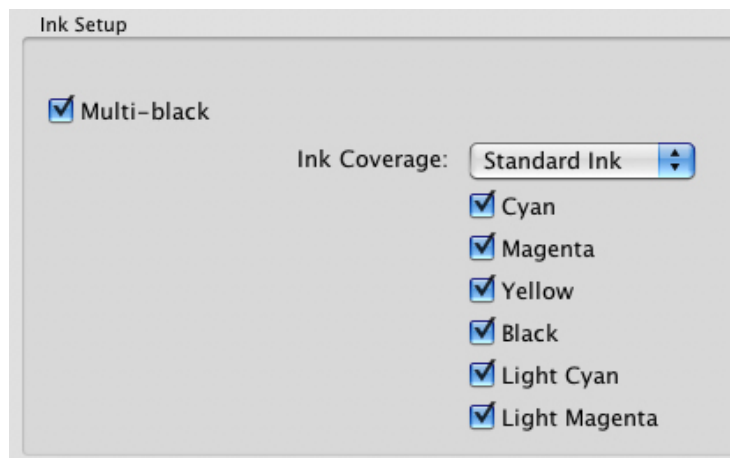

Ink Level Reporting

Ink Reporting (Ink Levels) is a feature of Epson and some restrictions may exist for non-Epson manufacturers. All Black Ink Wide Format models will not accurately report the ink levels in the cartridges. The low ink level light will indicate when the cartridge is close to drained (used). All Black Ink small format cartridges will report ink levels fairly accurately, but Ink Level reporting can be effected by power surges/issues. Cartridges drain fairly evenly so you can expect cartridges to be drained within a short period time of the first one. Cartridge weights for each slot can vary slightly due to the internal structure of the ink feeding system (some are actual labyrinths). All Black Ink cartridges will be delivered at the milliliter level you purchased.